

THUNDER

**CONGRATULATIONS ON THE
PURCHASE OF YOUR THUNDER
TYRE DEFLATOR**

For your personal safety please read,
understand and follow the information
provided in this instruction manual.



Connection to your Weekend Escape

PRODUCT FEATURES



1	Display screen
2	Power button
3	Light button
4	Valve remover
5	Valve stem
6	Hose collar

INSTRUCTIONS

Operation

Turn on: Press power button once.

Change unit of measurement: Turn on and press power button until desired unit of measure (PSI, BAR, KPA or KG/CM²) is shown on the right side of the screen.

Turn off: Press and hold power button for 5 seconds.

Turn light on or off: Press light button once.

Tyre Deflation

Step 1: Remove your tyres valve cap and turn on tyre gauge.

Step 2: Attach the tyre deflator to your tyres valve. Support the hose collar and rotate the valve stem (clockwise).

Step 3: Push the hose collar towards valve. Then, push the valve remover towards the valve and unscrew. Once unscrewed the pressure from the tyre should push the collar and valve remover away from the stem.

NOTE: Pressure should now be indicated on the gauge.

Step 4: Slide collar away from valve stem. Tyre will begin deflating.
Slide collar towards the stem to show deflated pressure.

Step 5: Push valve remover back in and screw inner valve (clockwise) until tight.

Step 6: Remove tyre deflator and refit valve cap.

Step 7: Turn off tyre gauge by holding power for 5 seconds.



THUNDER

GPC Asia Pacific Pty Ltd
ABN 97 097 993 283

51-57 Qantas Drive
Brisbane Airport QLD 4007
AUSTRALIA

thunderauto.com.au // thunderauto.co.nz

